




VAF-2

**Console Mount FXS Station  
Quick Guide**


# Overview

This document serves as a quick guide for the VAF-2 Console Mount FXS Station  
Item Number: 1022100100.

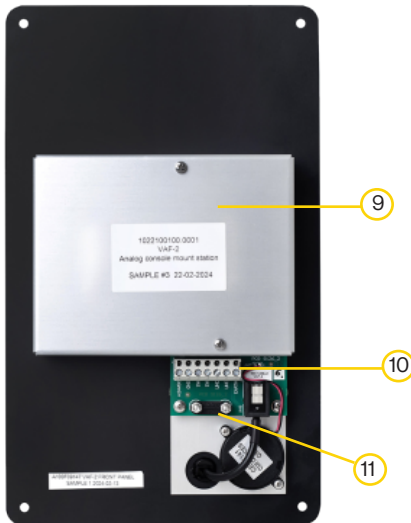

2

VAF-2

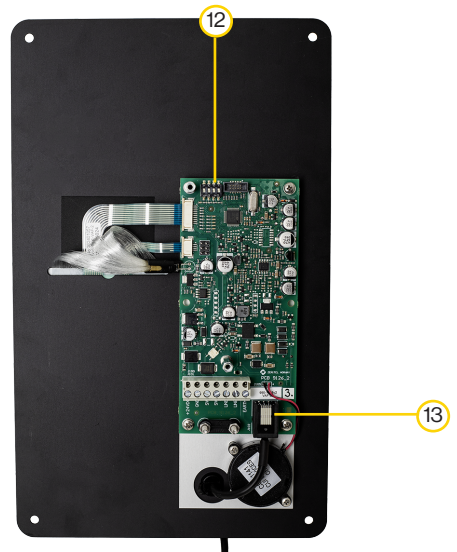


A100K12283

| Item | Description                |
|------|----------------------------|
| 1    | Handset with Magnet holder |
| 2    | Hole for buzzer tone       |
| 3    | Fastening holes            |
| 4    | Backlight adjustment       |
| 5    | Volume control             |
| 6    | Standard dial pad          |
| 7    | R Flash key                |
| 8    | Call LED indicator         |
| 9    | Back cover for PCB         |
| 10   | Connection terminals       |
| 11   | Cable clamp                |
| 12   | Flash time selector        |
| 13   | K2 Handset contact         |

## Mounting


Cut out 140 x 250mm in console and mount the VAF-2 with four M4 counter sunk screws according to the cut out view in image below.

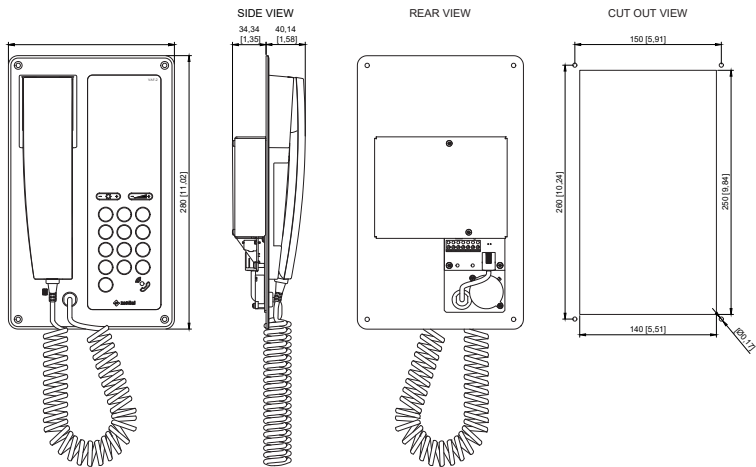

Type of screw depending on the console material (not part of the delivery).

# Connecting the Terminals

Make sure the cables have necessary length for maintenance.

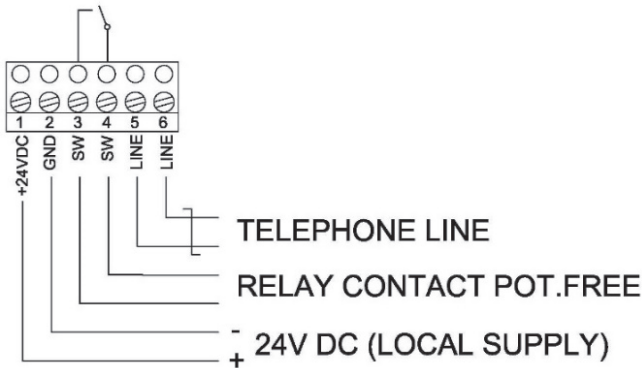


1. Thread the cable (s) through the cable clamp, and tighten with the two screws.
2. Connect the telephone line, twisted cable and 24 VDC (for back light only) to the terminal block.
3. "Relay contact Pot.Free" = Optional for extra signal device (Current limit 150mA)

# Settings

---

1. Set Recall button timing by using dipswitch SW1 Pin 1 & 2
2. Set Dialing type by using dipswitch SW1 Pin 3
3. Set Ringer frequency by using dipswitch SW1 Pin 4

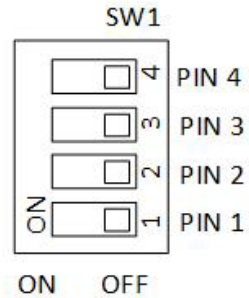

| Recall button timing |       |        | Dialing type |       | Ringer frequency |                       |
|----------------------|-------|--------|--------------|-------|------------------|-----------------------|
| Pin 1                | Pin 2 | Timing | Pin 3        |       | Pin 4            |                       |
| OFF                  | OFF   | 30ms   | ON           | Pulse | ON               | Ringer frequency HIGH |
| ON                   | OFF   | 60ms   | OFF          | DTMF  | OFF              | Ringer frequency LOW  |
| OFF                  | ON    | 100ms  | -            | -     | -                | -                     |
| ON                   | ON    | 150ms  | -            | -     | -                | -                     |

## Further Information

---

Go to <https://www.zenitel.com/product/vaf-2-fxs-station> or scan the QR-code below for more instructions on how to set up and configure the VAF-2.





**Hear, be heard, and be understood**  
– every time and everywhere

---

DOC. NO.

Date 09.27.24

**A100K12283**

**cs@zenitel.com**

Zenitel and its subsidiaries assume no responsibility for any errors that may appear in this publication, or for damages arising from the information therein. Zenitel, Vingtor-Stentofon and Phontech products are developed and marketed by Zenitel. The company's Quality Assurance System is certified to meet the requirements in NS-EN ISO 9001. Zenitel reserves the right to modify designs and alter specifications without notice. ZENITEL PROPRIETARY. This document and its supplementing elements contain Zenitel or third-party information which is proprietary and confidential. Any disclosure, copying, distribution or use is prohibited, if not otherwise explicitly agreed in writing with Zenitel. Any authorized reproduction, in part or in whole, must include this legend: Zenitel – All rights reserved.