





DT-800M

**Desktop Analog Telephone
Quick Guide**


Overview

This document serves as a quick guide for the DT-800M Desktop Analog Telephone item number 2212000101.

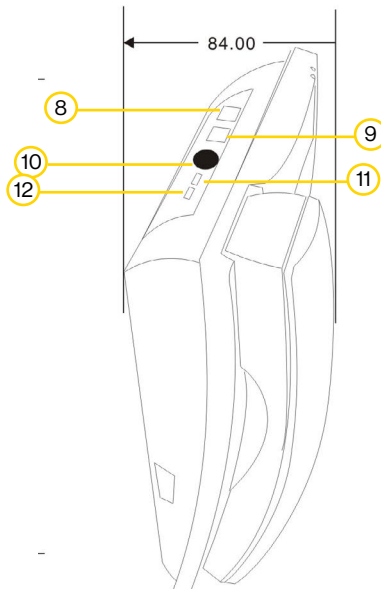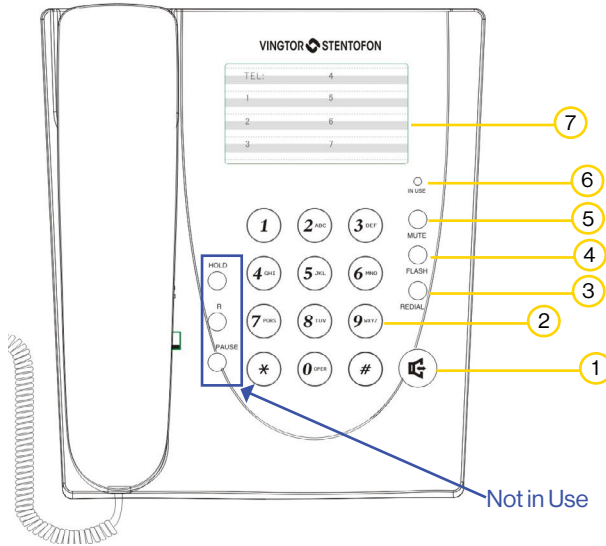

Number	Description
1	Loudspeaker
2	Dial Keys
3	Redial
4	Flash (R)
5	Mute (Press and Hold)
6	In Use Indication
7	Phone List
8	Telephone Line, RJ11
9	External Telephone Line, RJ11
10	Flash/R Switch (Select R Mode)
11	Tone or Pulse Switch (Select Tone Mode)
12	Ringing Signal Hi/Lo Volume

Mounting

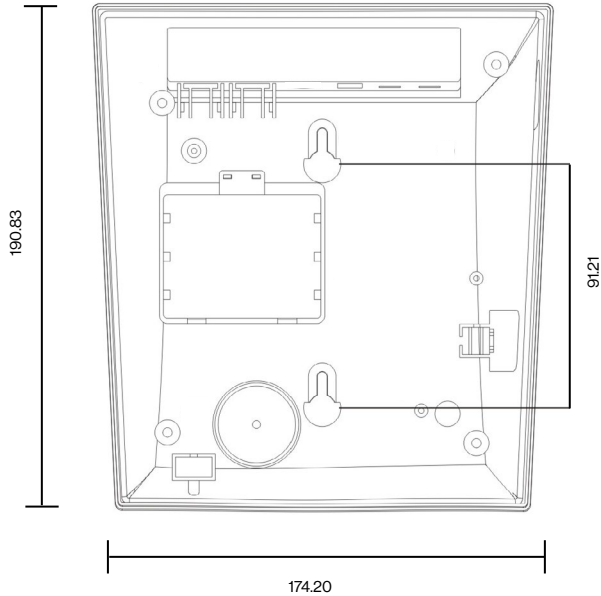

1. Determine where you would like to place the telephone.
2. Place two screws into the wall that are approximately 90 mm apart and vertically aligned.
3. Leave the screws approximately 4-5mm out from the wall.
4. Slide the telephone onto the wall to hook it on the screws.

Further Information

Go to <https://www.zenitel.com/product/dt-800m-0> or scan the QR-code below for more information.





Hear, be heard, and be understood
– every time and everywhere

DOC. NO.

Date 18.12.24

A100K12300

cs@zenitel.com

Zenitel and its subsidiaries assume no responsibility for any errors that may appear in this publication, or for damages arising from the information therein. Zenitel, Vingtor-Stentofon and Phontech products are developed and marketed by Zenitel. The company's Quality Assurance System is certified to meet the requirements in NS-EN ISO 9001. Zenitel reserves the right to modify designs and alter specifications without notice. ZENITEL PROPRIETARY. This document and its supplementing elements contain Zenitel or third-party information which is proprietary and confidential. Any disclosure, copying, distribution or use is prohibited, if not otherwise explicitly agreed in writing with Zenitel. Any authorized reproduction, in part or in whole, must include this legend: Zenitel – All rights reserved.